


### Features

1. 100A ;  
Continuous 100A load.
2. ;  
It has one set of normally open contacts.


### Performance Parameters at23

Contact Arrangement	1K (1NO)	
	0.5m	
	80mV (at 100A)	
	7le, 1s	30ms
	-40 ~85	30ms
	M6	50Hz/60Hz 1500VAC/1min
	3.5g,10~200Hz,1/2	50Hz/60Hz 1500VAC/1min
	5 ~95 RH	100M 1min
	70x42x73mm	50M 1min
	20000	5g
	6-8N.m	
/	/	




AZJ 100 S K 24 P FS T01


## Wiring Diagram

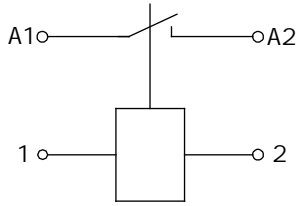


AZJ100S( )  
AZJ100S Wiring Diagram  
Without Auxiliary Switch

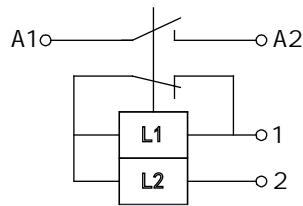

AZJ100D( )  
AZJ100D Wiring Diagram  
Without Auxiliary Switch

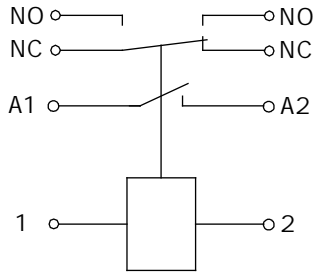

AZJ100S( )  
AZJ100S Wiring Diagram  
with Auxiliary Switch

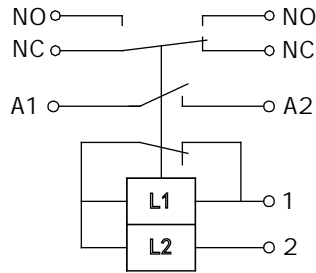

AZJ100D( )  
AZJ100D Wiring Diagram  
with Auxiliary Switch

NC  
NC Auxiliary Switch Normally  
Closed Contact

NO  
NO Auxiliary Switch Normally  
Open Contact

A1,A2  
A1, A2 Main Terminal Wiring

1,2                    12-72V  
1, 2 Coil Wiring 12-72V

## Outline Installation Dimension Drawing

Mounting Hole Distance 47.0±0.5




2-M4  
Load Wiring 2-M4  
1.2-2N.m 2.0N.m Max  
Torque 1.2-2N.m 2.0N.m Max

2-M6  
Load Wiring 2-M6  
6-8N.m 10N.m Max  
Torque 6-8N.m 10N.m Max

# Outline Installation Dimension Drawing

With Auxiliary Switch

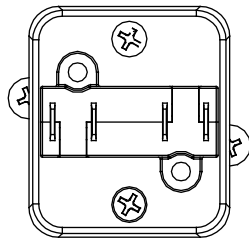

2-M4  
Load Wiring 2-M4  
1.2-2N.m 2.0N.m Max  
Torque 1.2-2N.m 2.0N.m Max

2-M6  
Load Wiring 2-M6  
6-8N.m 10N.m Max  
Torque 6-8N.m 10N.m Max

## Usage Cautions

1.

This document is only for customer selection reference, AOKAI has tried the best to ensure the accuracy of the information in this document. Product specifications and parameters may be changed due to product improvement etc., they may be inconsistent because of not updated in time. For the specific parameters and performance of each product, please refer to the samples provided by AOKAI and the corresponding signed and controlled specification.

2.

Regarding the application of this product, please select the matching product according to your specific use conditions and environmental requirements when selecting the product. If the requirements are not clearly specified, please contact AOKAI to obtain more technical support.

3.

When installing and using this product, regardless of wiring or fixed installation, it is required to use anti-loose spring washers.

4.

The torque for installing fasteners should be within the standard range required by this specification. It may cause the unstable installation or damaging the product if the torque is lower than the minimum torque or higher than the maximum torque.

5.

Do not install the contactor in places with strong magnetic fields (such as transformers or strong magnets), or close to objects with thermal radiation. It is recommended to use it with a cooling fan.

6.

30cm

It is forbidden to use the product that have been dropped from a high place (height $\geq$ 30cm).

7.

It is forbidden to use the product in an environment with oil pollution, especially before wiring, it will seriously affect the main terminals conductivity if they are polluted by oil pollution, and affect the product life.

8.

It is forbidden to use the product beyond the rated electrical life. When the rated electrical life is reached, although the product can continue to work, there is a risk of failure, explosion, and burning because of non-breaking.

9.

This product cannot be used as a protector, and the circuit must be connected with a protector in series when using.

10.

AOKAI only does the resistive electrical life verification and quality assurance. When the product is used in an environment with inductive load or capacitive load, it is recommended that the circuit should be connected in parallel with a surge protection device.

11.

After continuous work, restarting immediately after disconnection will affect the pull-in voltage because the product is in a hot state, and the pull-in voltage will increase, which is a reasonable phenomenon.

12.

It is strictly prohibited to wiring when power on.